


HOOF ARMOR DISPENSER CARTRIDGE CHANGE

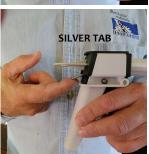











Once all of the Hoof Armor has been dispensed the plunger will have moved from the starting position to the ending position. In order to remove the used cartridge follow these steps.

Step 1.
While lifting up on the silver tab (releasing rachet mechanism) begin pulling the plunger back into the starting position.



e achet ulling the





Step 2.
Grasp the black clip and tilt it open.
It has a spring mechanism.

